


REALTEK

Realtek IOS Simple Configure Wizard User Guide

IOS Simple Configure Wizard User Guide

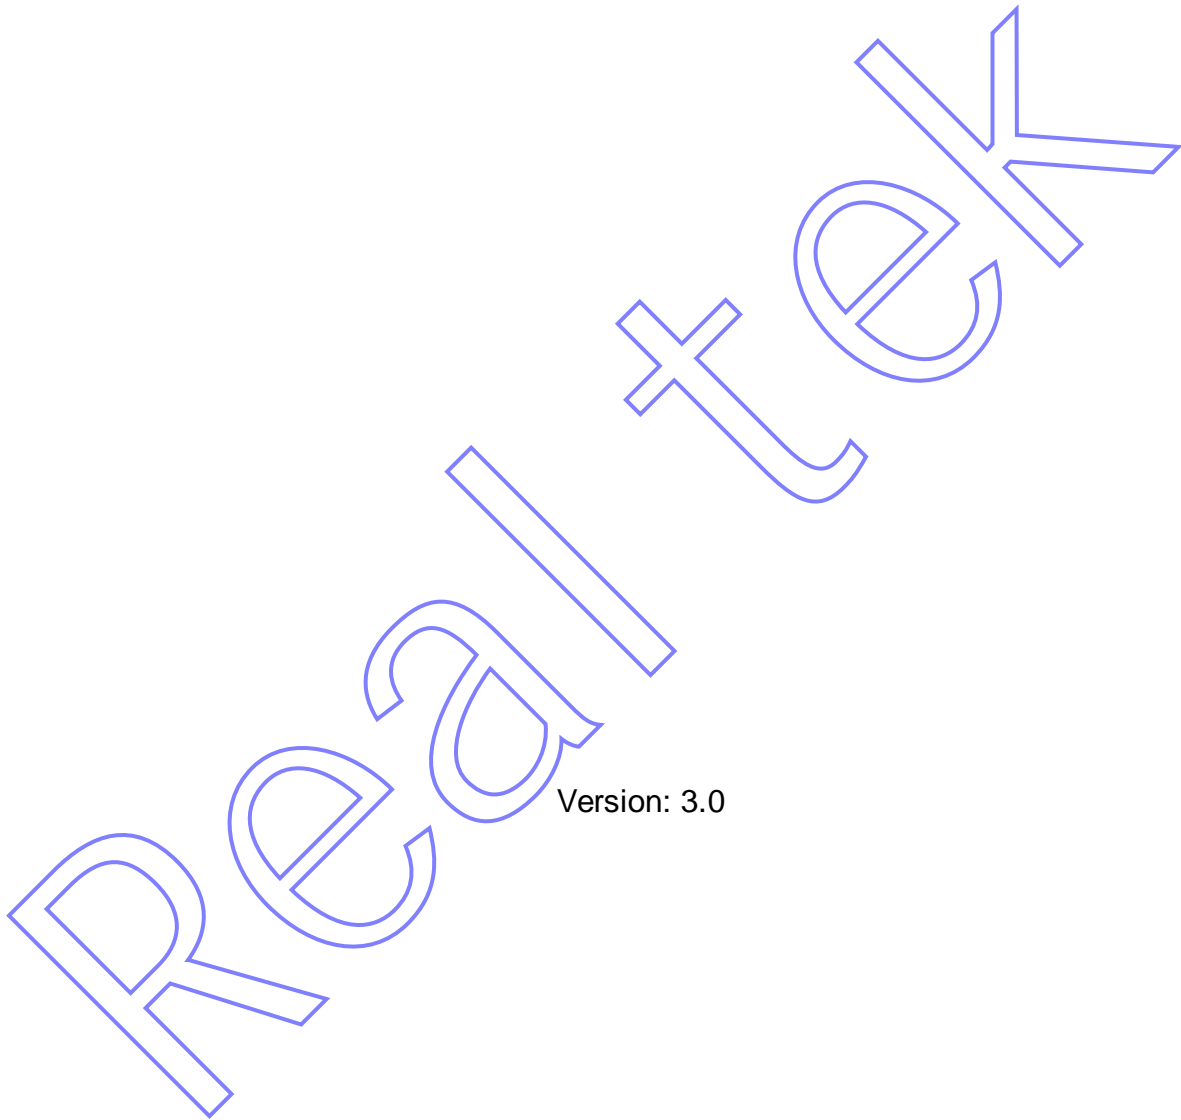

Version: 3.0

This document is subject to change without notice. The document contains Realtek confidential information and must not be disclosed to any third party without appropriate NDA.

CHANGE HISTORY

VERSION	DATE	REMARKS
1.0	2014/08/25	Initial Release
2.0	2015/08/15	Refined simple config
3.0	2016/08/10	Refined simple config

Realtek

Contents

1. IOS APP USAGE	1
2. CONFIGURE SERVICE.....	2
2.1 CONFIGURE PROGRESS	2
3 DISCOVERY SERVICE.....	4
4 CONTROL SERVICE	5
4.1 RENAME DEVICE	5
4.2 REMOVE DEVICE	6
4.3 CONNECT TO OTHER AP.....	7
5 REFERENCE.....	8

1. IOS APP Usage


There are three service on the Simple config Wizard APP :

- A. Configure Service
- B. Discovery Service
- C. Control Service
 - Rename Device
 - Remove Device


2. Configure Service

2.1 Configure Progress


(1) Click the simple config wizard app icon on your phone.

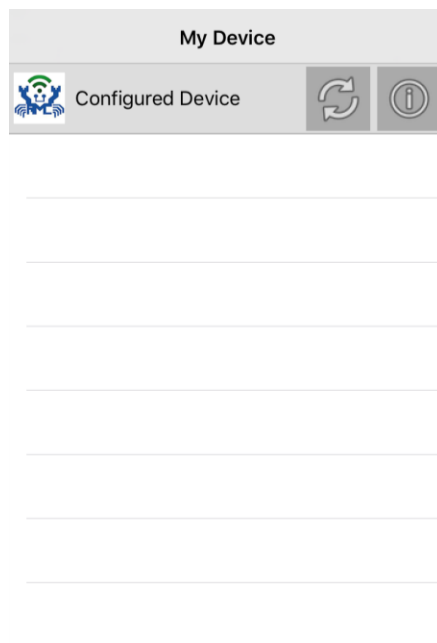


(2) Click the “Configure New Device” to get target AP information.

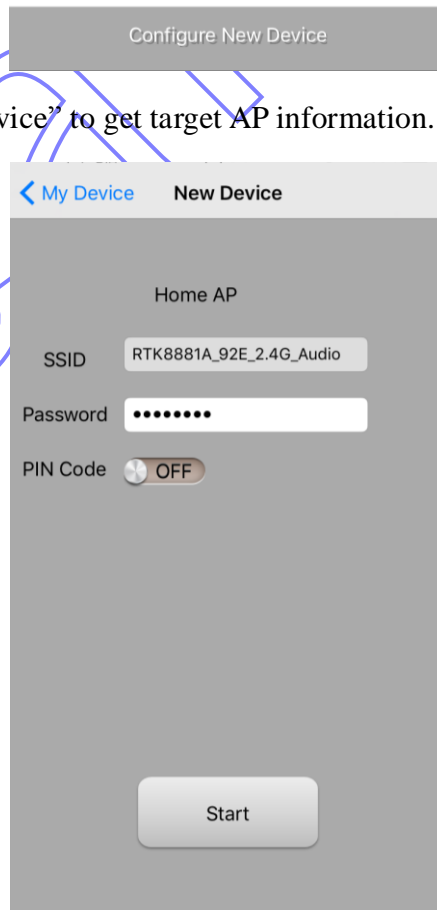

(3) Before start configuring, key in the device's PIN code if PIN code is needed, and then click "Start".

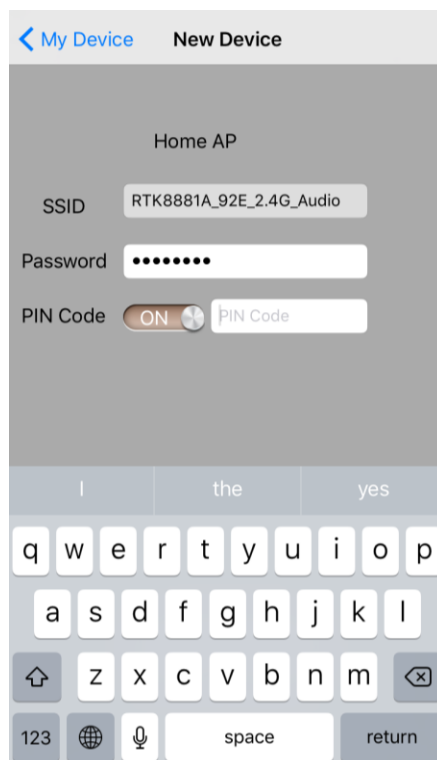


(2) After configuring, the result will display.

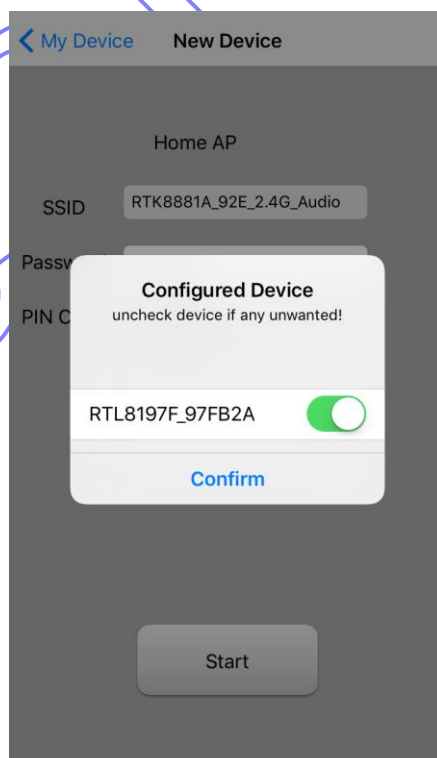


3 Discovery Service

(1) Click the upper right button  to scan device.

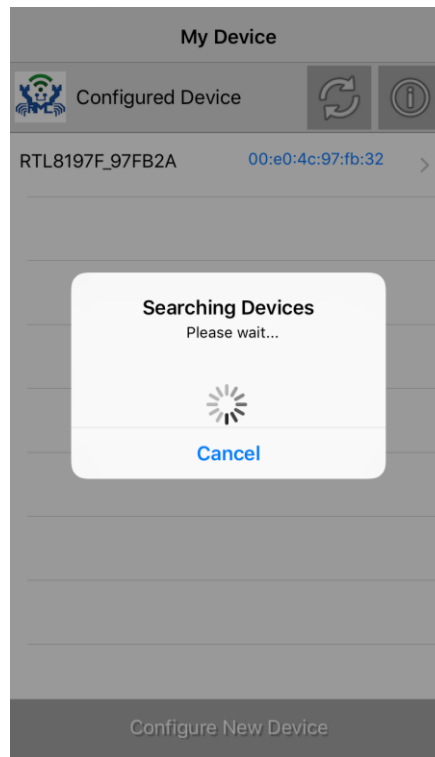


(2) The scan result will display. The connected device's information will be shown below.

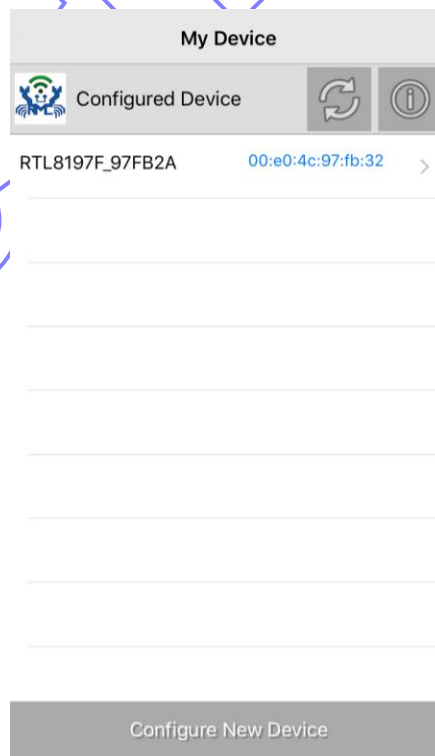


4 Control Service

4.1 Rename Device

(1) Select one device to operate, such as RTL8197F_97FB2A.

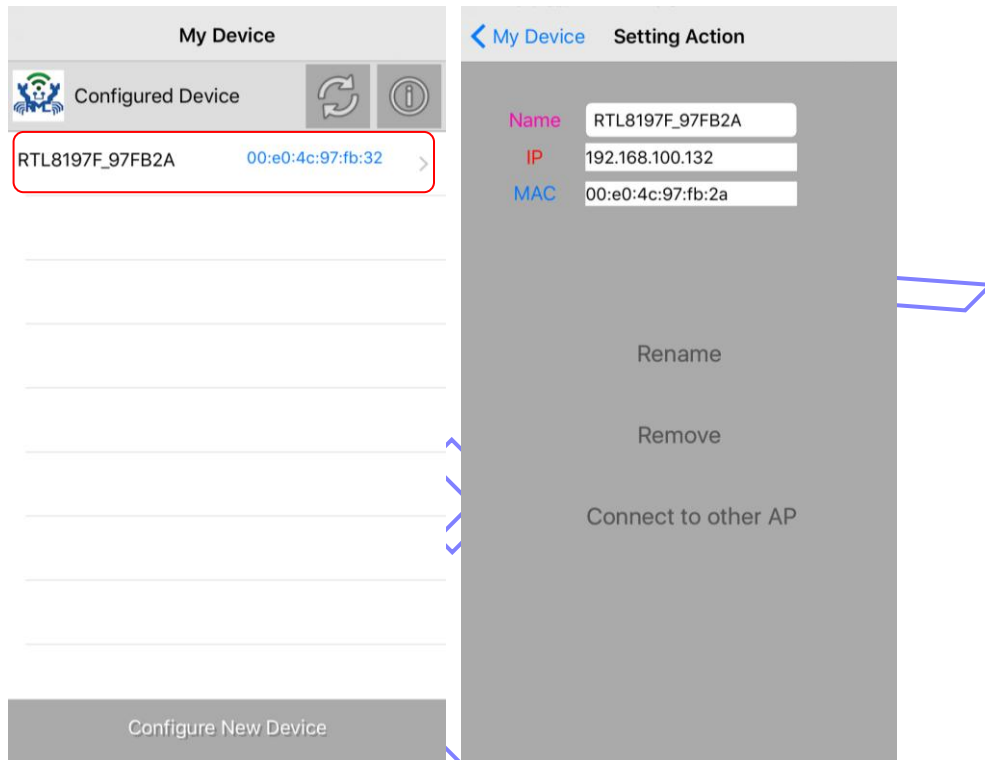


(2) Input new device name at "Name". Then, click "Rename" button to change the device's name.

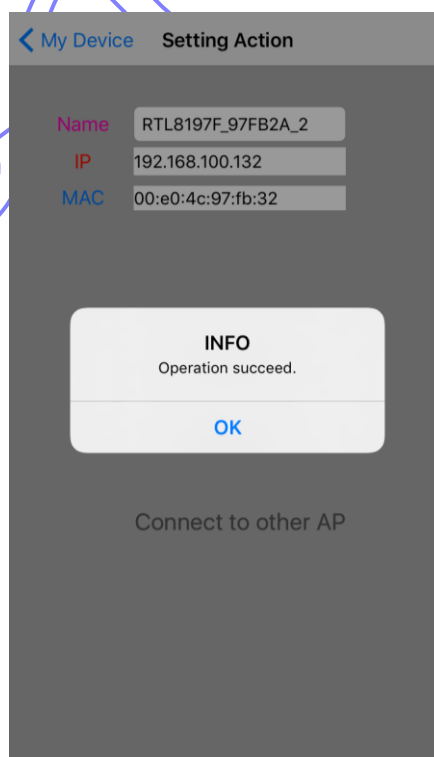


4.2 Remove Device

(1) Select one device to operate, such as RTL8197F_97FB2A.

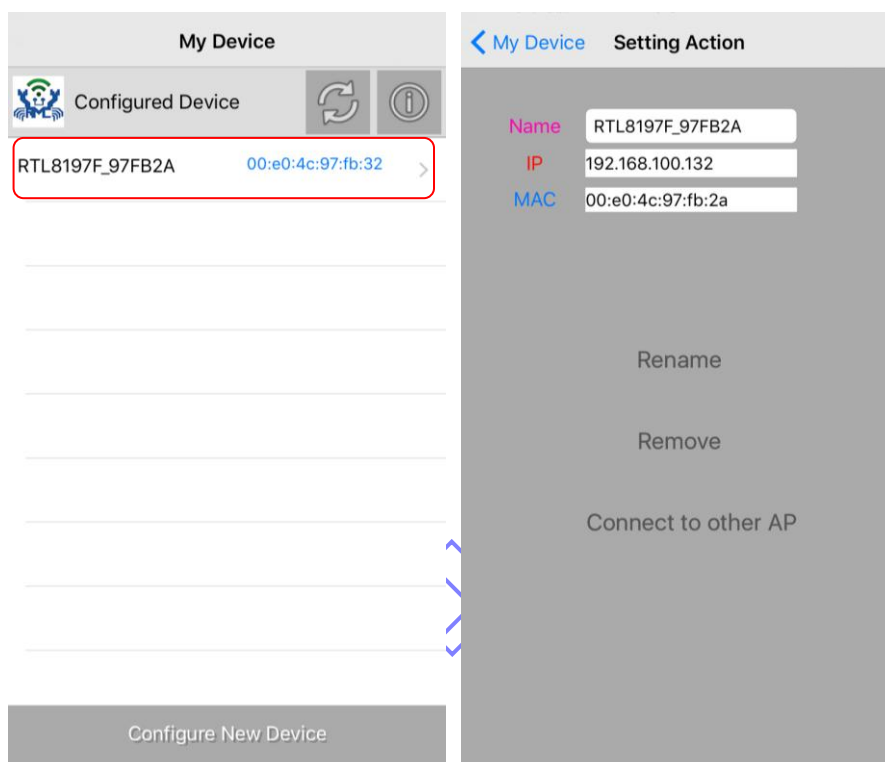


(2) Select “Remove” operation. Then, the removed device will disconnect target AP.

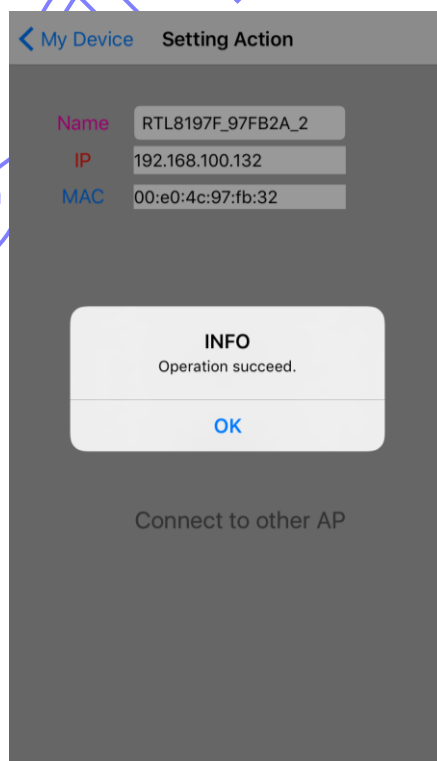


4.3 Connect to other AP

(1) If the device support new AP profile controller, the operation is enabled. Select one device to operate, such as RTL8197F_97FB2A.

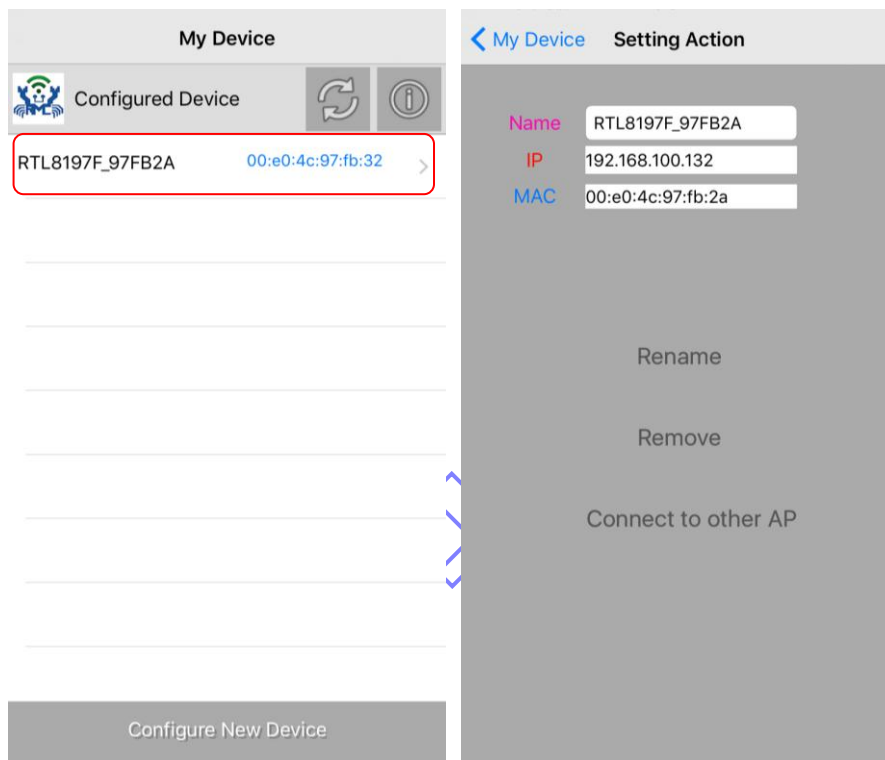

(2) Select “Connect to other AP” operation. Input SSID/passowrd of new AP, and select “connect”. Then, the device will connect to your specific AP.

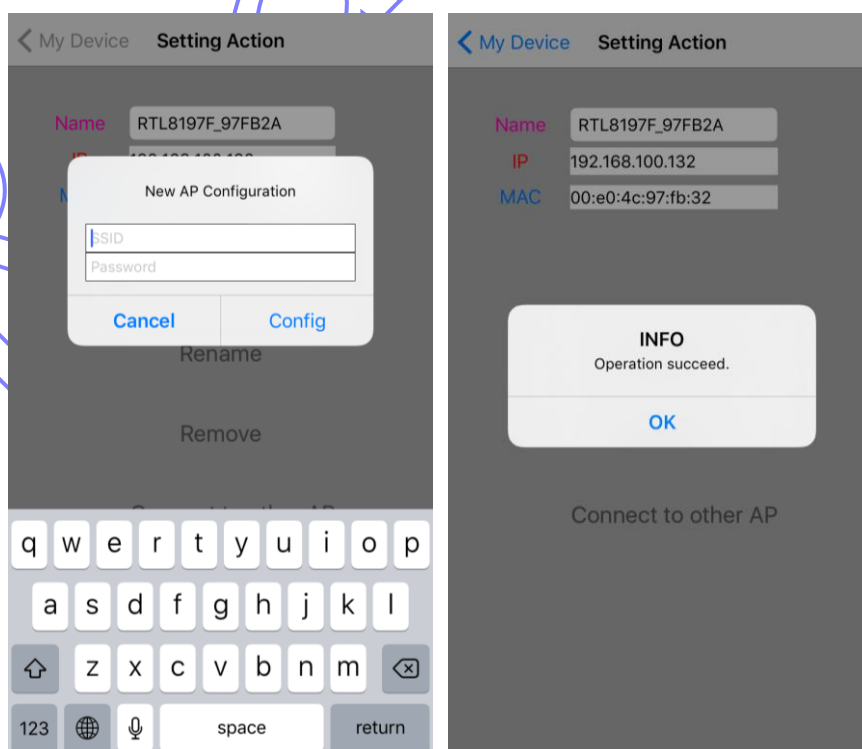

5 Reference

N/A

Realtek